



Citroen CX25 T1

36-way ECU connector

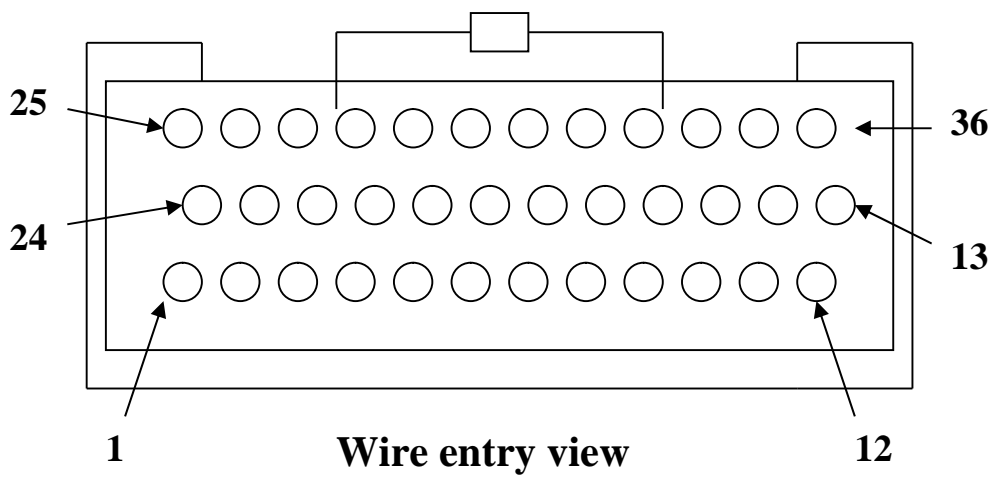

K6+	Connection	Comments
1	Injector driver 4	Injector 2
2	AuxOut2/IACV	IACV
3	AuxOut3/IACV	IACV
4	Ignition driver 3/AuxOut4	Ignition coil, cylinder 4
5	Ignition driver 2/AuxOut5	Ignition coil, cylinder 3
6	Ignition driver 6/AuxOut6	-
7	AuxIn7	Knock signal
8	TPS	Throttle position signal input
9	+5v out	5v output, 100mA max TPS/MAP sensor supply
10	AuxIn10	Wideband AFR
11	Ignition sense input	+12v supply via ignition switch
12	Tacho output signal	12v pulsed output
13	Cam2	-
14	AuxOut14/AuxIn14	-
15	Cam1	Flywheel sync signal
16	NTC temperature sensor	Air temperature signal input
17	AuxOut17/Injector driver 5	Boost gauge control signal
18	Sensor ground 2	Knock signal ground
19	AuxOut19/Ignition driver 4	Ignition coil 2
20	AuxOut20/Ignition driver 5	Bosch injection/fuel pump relay control
21	AuxOut21/Injector driver 6	Boost control valve
22	IACV	IACV
23	Injector driver 2	Injector 3
24	Injector driver 1	Injector 1
25	Ignition driver 1	Ignition coil 1
26	AuxOut26/Injector driver 3	Injector 4
27	IACV	IACV
28	+12v Ignition supply	+12v supply Bosch relay
29	ECU ground	Power ground
30	Sensor ground	Sensor ground
31	Main trigger signal input	Crank sensor signal
32	Main trigger sensor ground	Crank/Sync sensor ground
33	NTC temperature sensor	Coolant temp signal input
34	AuxIn34	MAP sensor signal
35	AuxIn35	-
36	AuxIn36 / AuxOut36	Knock lamp control via 1.2Kohm resistor

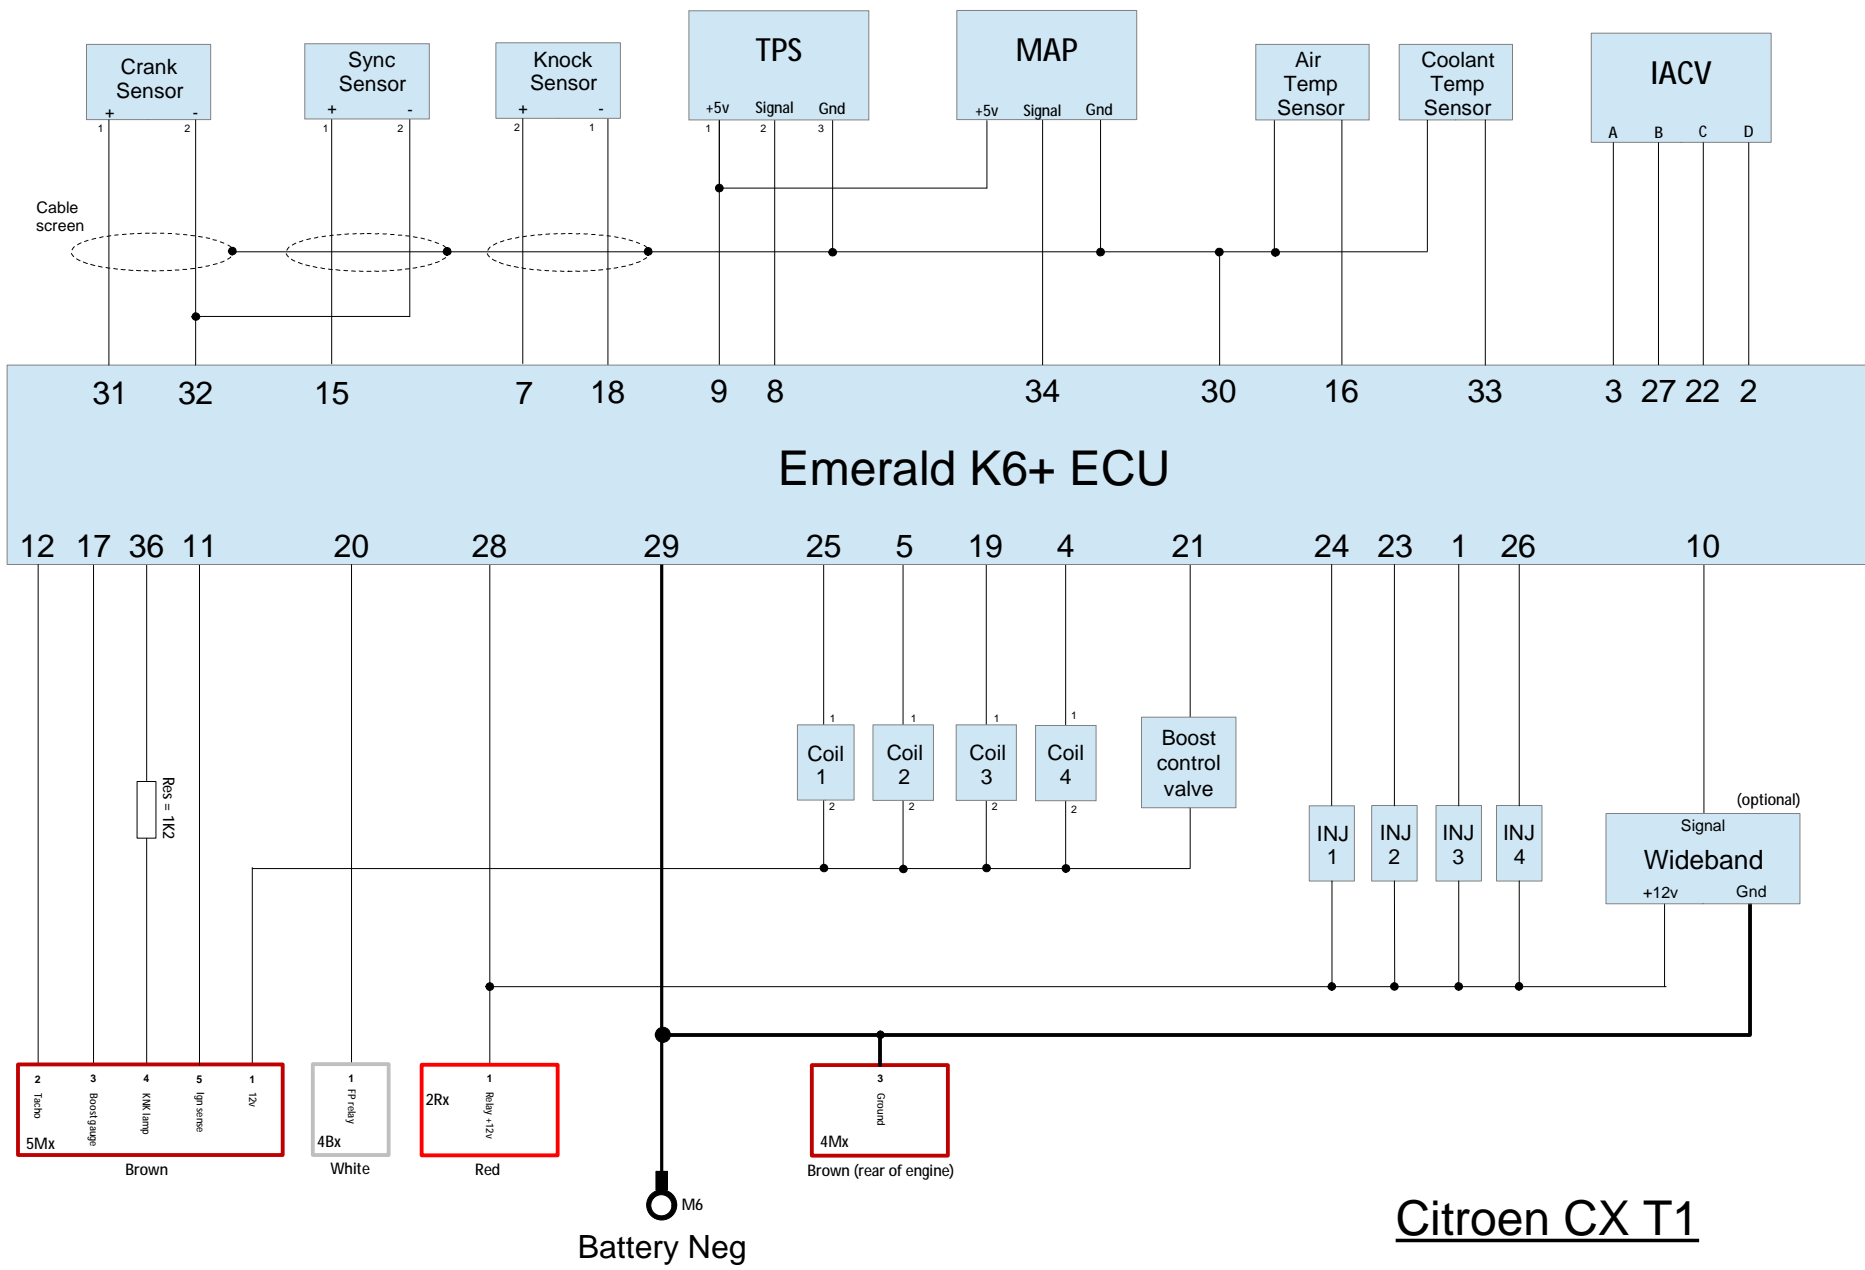

Citroen CX T1